


Pulling ATTACHMENTS

38,1 - 228 mm Jaw Spreads

Recommended for the removal of bearings, bearing cups, bushings and oil seals.

- Handles internal pulling jobs, such as, bearing/bearing cup removal, bushing removal, oil seals, etc.
- Remove hard to get at parts easily and without damage!
- Use with corresponding Power Team Slide Hammer or Push-Puller.®
- Adjustable jaws fit various diameters

Fed. Spec.: GGG-P-00781-D

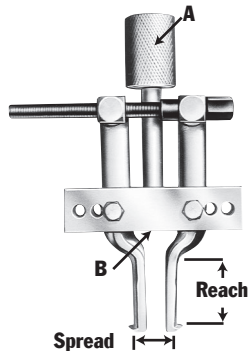

⚠ CAUTION – These attachments may not withstand the full tonnage of the pullers they are used with. The shape and condition of the part being pulled affects the tonnage at which the jaws may slip off. Always select the largest attachment which will fit behind the part being pulled. Refer to page 195.

Order No.	Jaw		A (in. - thd.)	B (in. - thd.)	Wt. (kg)	Application
	Spread (mm)	Reach (mm)				
1153	38,1-127	54	1-14	5/8-18	1,9	Use with Nos. 927 and 938 Push-Pullers,
1150	38,1-152	102	1-14	5/8-18	2	
1151	38,1-178	133	1-14	5/8-18	2	
1152	38,1-152	102	-	5/8-18	1,6	Use with Nos. 927 and 938 Push-Pullers, 1155 and 1156 slide hammer pullers, or 24832 and 24833 puller screw.
1154	38,1-152	102	1-8	5/8-18	2	Use with No. PPH17.
1165	76,7-229	149	1 1/2-12	1-14	6,1	Use with No. 939 Push-Puller.
1166	76,2-229	149	1 1/4-7	1-14	6,1	Use with No. PPH30.
Puller Screws						
24832	349 mm long		5/8-18	0,5		Use with Nos. 1150, 1151, 1152, and 1153. Acts as a regular forcing screw when threaded directly into block of pulling attachment.
24833	140 mm long		5/8-18	0,2		Use with Nos. 1150, 1152, and 1153. Acts as a regular forcing screw when threaded directly into block of pulling attachment.